

Installation Guide: SilentFiber™ 2x4 Panels

Tools Required:

- Pencil, drill, screws, anchors (if necessary), leveling tool, and sharp-point impaling clips (included)






Wall Mounting Polyester Panels:

- 1.) Find a spot on the wall where each panel will be placed, keep all panels spaced out accordingly and level with one another.
- 2.) Using a pencil, score a small mark at the top of each panel.
- 3.) Using the impaling clip as a template, drill a hole in the wall for all 4 corners of the 2x4 panel.
- 4.) Screw the impaling clips to the wall (5-6" from each edge of the panel).
- 5.) Once the impaling clips are in place, take the panel press it firmly into the sharp points of the impaling clips - press on each corner and in the middle to insure the panel has a firm hold.

*For concrete walls:

- Use glues or adhesives to adhere the clip to the wall.
- Once the clips are dried in place, take the panel and press it firmly into the sharp points of the impaling clips - press on each corner and in the middle to insure the panel has a firm hold.

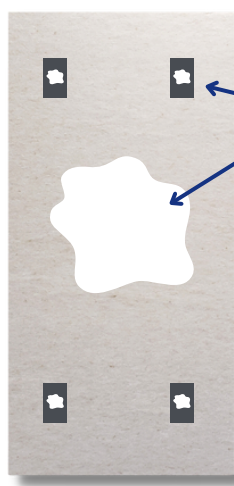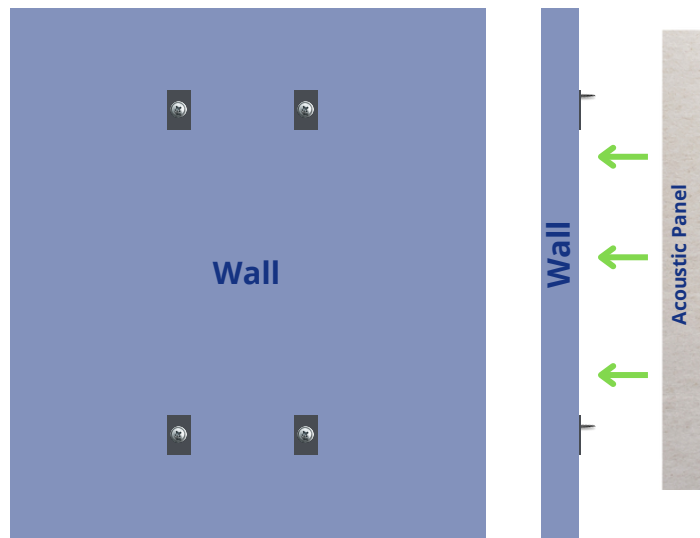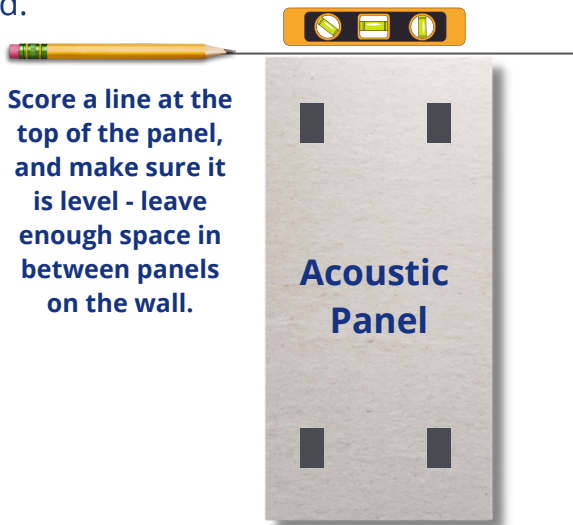

Glues or adhesives can be used for additional reinforcement of the clips or panel.



1215 Valley Belt Rd. STE B
Brooklyn Heights, OH 44131
+1 (877) 399-9697

info@soundacousticsolutions.com
www.soundacousticsolutions.com