





Installation Guide: Wall & Ceiling Diffusers

Method #3:

Direct Mount to Wall (Pyramid Diffuser):

- 1.) Drill 1/8" hole in all 4 corners of the pyramid diffuser (as shown).
- 2.) Drill a screw into all 4 holes in each corner
- 3.) Wall anchors or additional fasteners may be used (not provided by SAS)
- 4.) Level and adjust as necessary.

Diffuser Panel orientation can vary according to architectural drawings

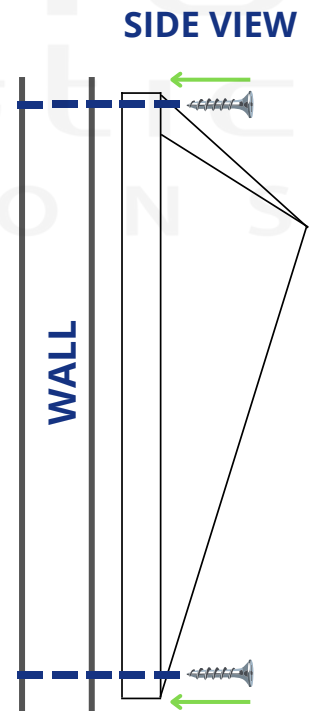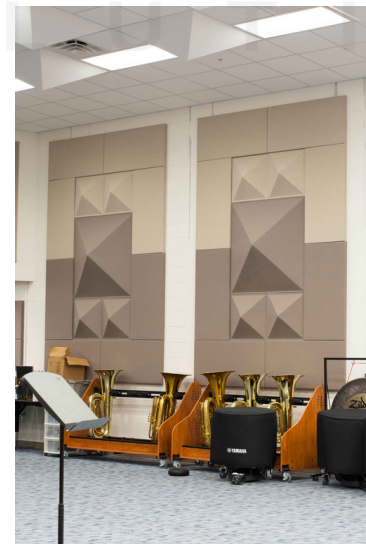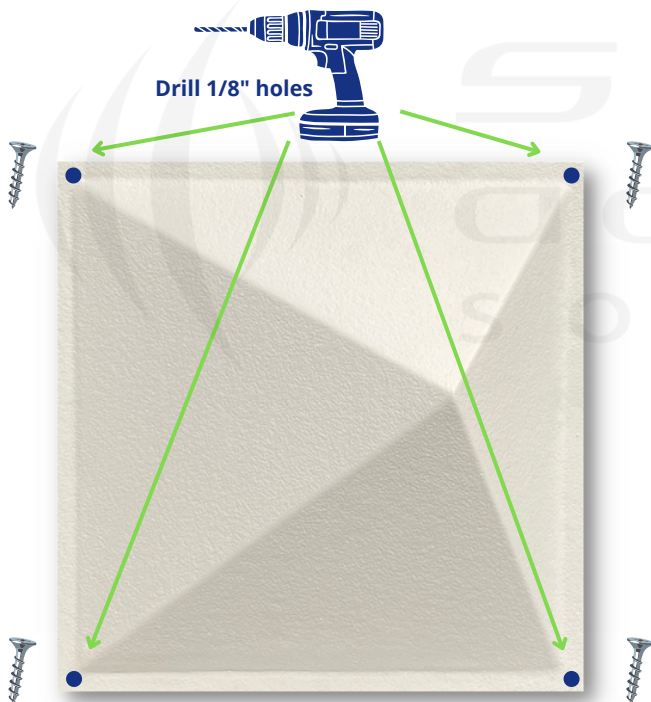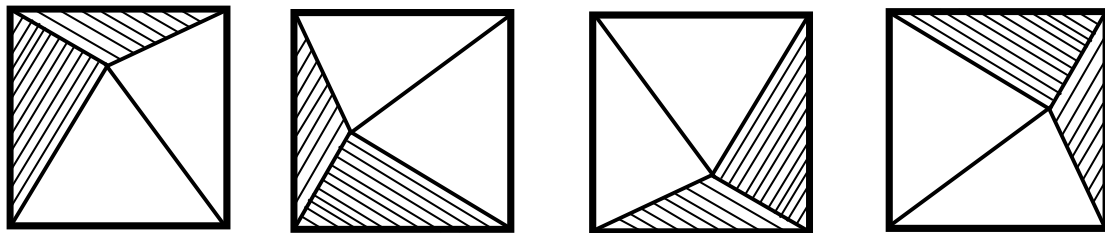

1215 Valley Belt Rd. STE B
Brooklyn Heights, OH 44131
+1 (877) 399-9697

info@soundacousticsolutions.com
www.soundacousticsolutions.com